


◆ Occupancy sensor

TCB-SIR41UM-E

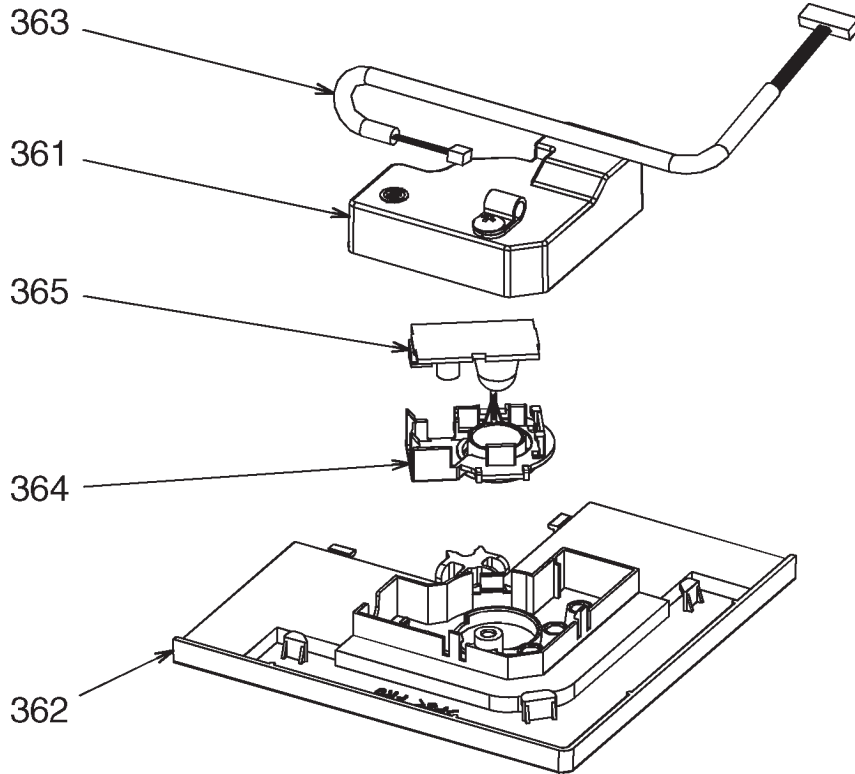

Location No.	Part No.	Description	Q'ty/Set TCB-SIR41UM-E
361	43162088	COVER, WRS	1
362	43108037	COVER, PANEL WRS	1
363	43160666	LEAD	1
364	43408062	COVER, SENSOR	1
365	43469067	THERMOSTAT	1