

TOSHIBA

SERVICE MANUAL

AIR-CONDITIONER

SPLIT TYPE

Indoor Unit

<Console, Heat Pump Type>

RAS-B10J2FVG-E

 
 
 
RAS-B13J2FVG-E

RAS-B18J2FVG-E

RAS-10J2AVSG-E

RAS-13J2AVSG-E

RAS-18J2AVSG-E

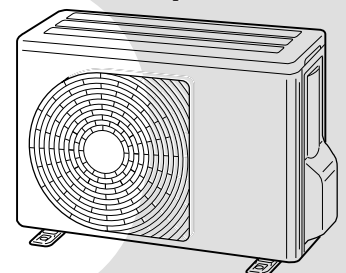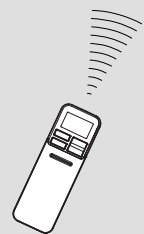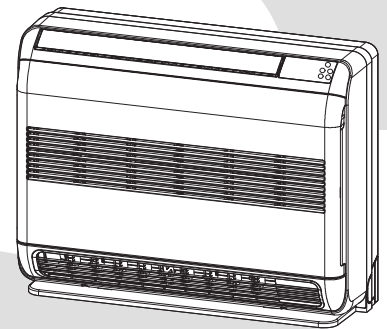

R32 or R410A

 
INVERTER



Revised on March, 2020


13. EXPLODED VIEWS AND PARTS LIST

13-1. Indoor Unit

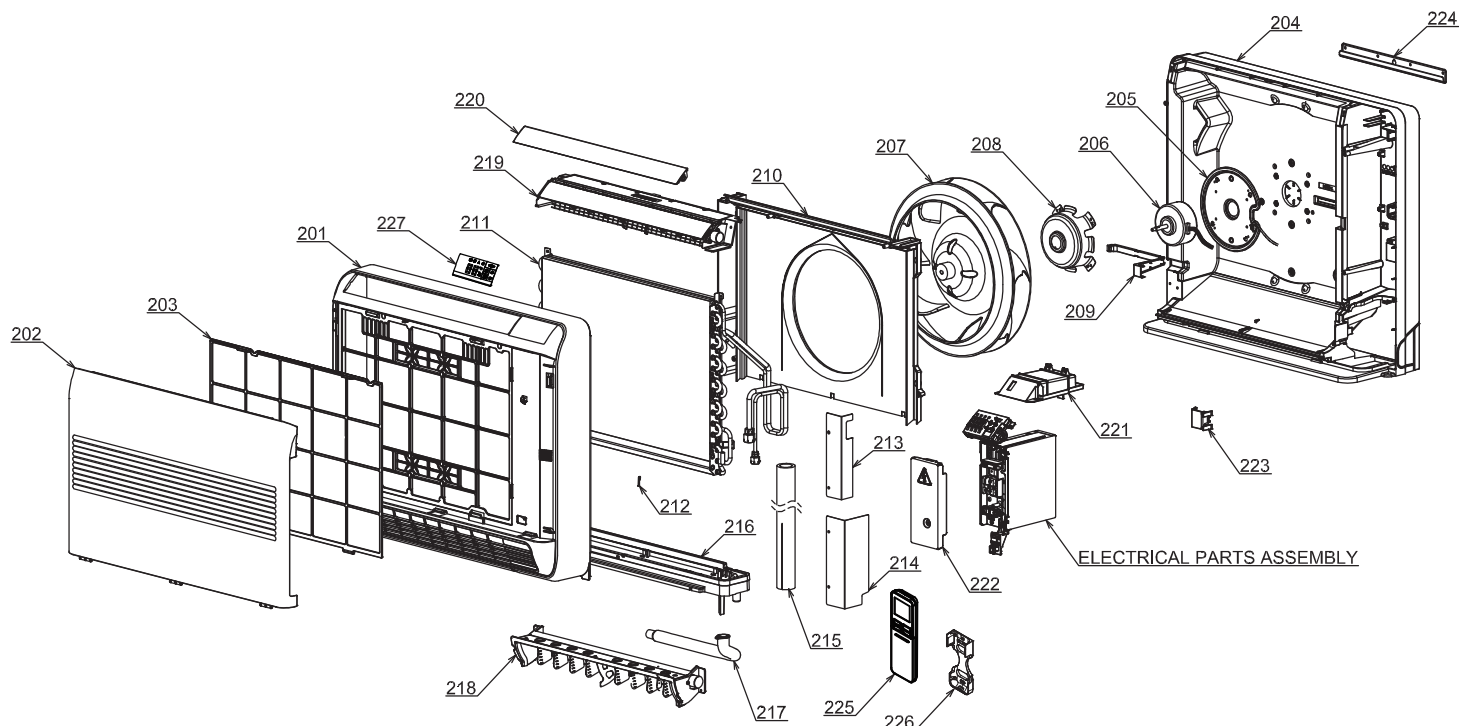

Location No.	Part No.	Description	Location No.	Part No.	Description
201	43T00553	FRONT PANEL ASSY	213	43T79314	DRAIN GUIDE (UP)
202	43T09460	INLET GRILLE ASSY	214	43T79315	DRAIN GUIDE (DOWN)
203	43T80325	AIR FILTER	215	43T49341	SHIELD PIPE
204	43T03379	BACK BODY ASSY	216	43T72310	DRAIN PAN ASSY
205	43T39340	MOTOR BASE ASSY	217	43T70313	HOSE, DRAIN
206	43T21424	FAN MOTOR ASSY	218	43T22317	DAMPER ASSY
207	43T20330	TURBO FAN ASSY	219	43T22316	UPPER LOUVER ASSY
208	43T60408	MOTOR HOLDER	220	43T22315	HORIZONTAL LOUVER
209	43T63331	LEAD COVER	221	43T63333	DISPLAY BASE
210	43T22314	BELL MOUTH ASSY	222	43T62339	TERMINAL COVER ASSY
211	43T44634	REFRIGERANT CYCLE ASSY (FOR RAS-B18J2FVG-E)	223	43T49340	PIPE HOLDER
211	43T44673	REFRIGERANT CYCLE ASSY (FOR RAS-B10,B13J2FVG-E)	224	43T82316	PLATE MOUNTING
212	43T19333	HOLDER, SENSOR	225	43T66390	WIRELESS REMOCO
			226	43T83305	HOLDER, REMOTE CONTROL
			227	43T08425	SHEET-DISPLAY

 13-2. Indoor Unit (E-Part)

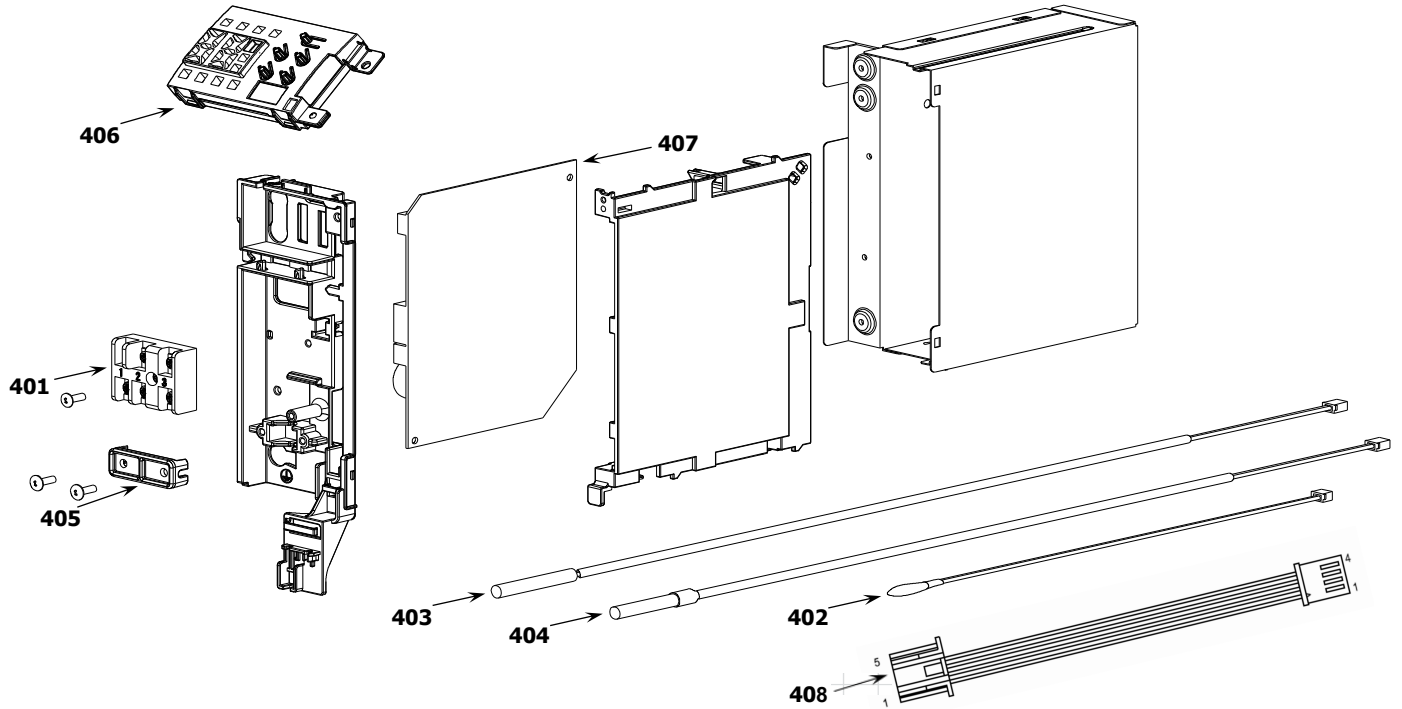

Location No.	Part No.	Description	Location No.	Part No.	Description
401	43T60406	TERMINAL 3P	407	43T6W712	PC BOARD (FOR RAS-B13J2FVG-E)
402	43T69320	TEMPERATURE SENSOR	407	43T6W743	PC BOARD (FOR RAS-B18J2FVG-E)
403	43T50395	TEMPERATURE SENSOR	408	43T60502	HOUSING-WiFi
404	43T50333	SENSOR:HEAT EXCHANGER			
405	43T62003	CORD CLAMP			
406	43T69865	PC BOARD ASSY,WRS-LED			
407	43T6W711	PC BOARD (FOR RAS-B10J2FVG-E)			